15th lesson

Dear valued Distributor & Business Partner,
Synel proudly presents you to

HARMONY
Innovative Workforce Management That Works

DEMO SERVER

The HARMONY Demo Server allows you to
experiment with world leading Workforce & Security
Management Solutions for Organizations.
SYNEL offers you to try this innovative service
to experience what HARMONY has got to offer

For better training
we recommend following the instructions & workflow below.

The pssword is active for one week
TO GET YOUR PASSWORD PLEASE CONTACT:

tech@synel.com / +972-4-9596707
Itzik Ventura: itzikv@synel.co.il Cell: +972-52-2685580
Maoz Tamir: maoz@synel.co.il   Cell: +972-52-3134223

Using HARMONY Demo server
15th lesson
Enter the HARMONY Client
use the user name and password provided by the tech team

SY-400 with two FP&PRX readers

The SY-400 can be connected to any of the following reader types:
- Fingerprint Reader
- Proximity
- Barcode
- Magnetic
- Two FingerPrint with PRX

In this lesson you will learn how to set SY400 with two FP and PRX readers.

**Steps for Defining
the SY-400 Controller**
1. Add terminal type SY-400
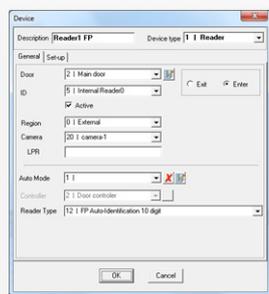2. Modify Card type - badge reading format

Steps for Defining a Device
3. Add 4 readers Element
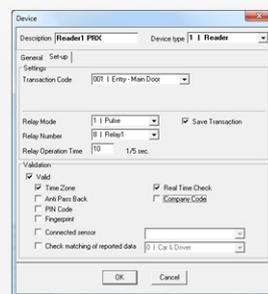4. Assign to a Door
5. Choose relevant Reader Type

2.1 Reader-1 FP

Reader-1 PRX

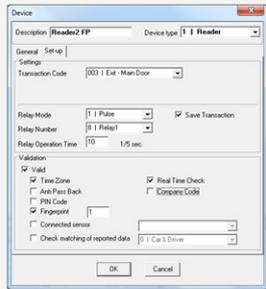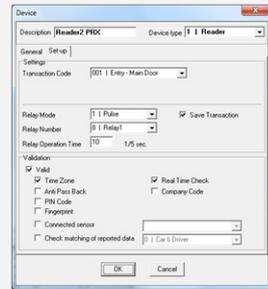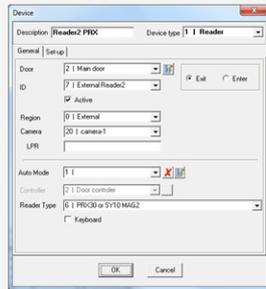### 2.2 Reader-2 FP

Reader-2 PRX

See you in the next lesson..